

## Step-by-Step guide - How to design a Bay Window

### Step 1:

#### Create your default settings:

The default settings set the preferences for all the windows you want to create for the project.


If you change the settings here, all windows will be updated.

If you are ready click on “Save defaults & create product”

Welcome to your configurator!

To get started set your project default settings, this is where you decide the basic characteristics of your windows such as system or colour.

Once you have chosen your default settings please click “Save defaults & create product”. You will then be able to personalise and create all windows for your project.

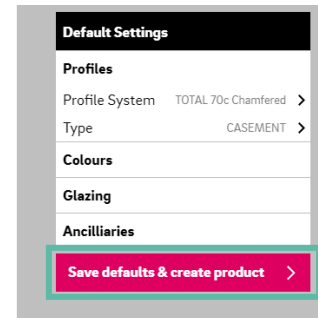



### Step 2:

#### Change style and dimensions:

Click on “Style and Dimensions”.

Select the section “Bay Windows” displayed at the bottom.

Choose your required style of window elements.

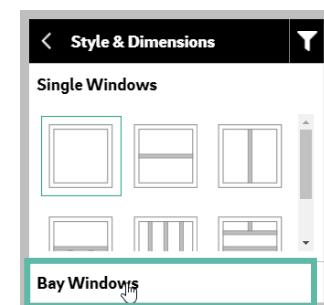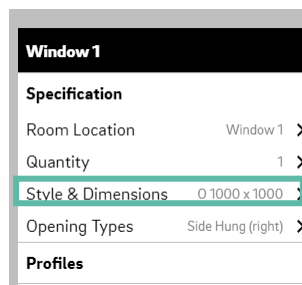

### Step 3:


#### Enter your measurements:

Choose the way of entering the dimension either based on lengths or angles.

The dimensions are always measured from the inside.

Also add the total height of the bay window.

If necessary you can define that all dimensions are equally distributed by clicking on “Align Equally”.

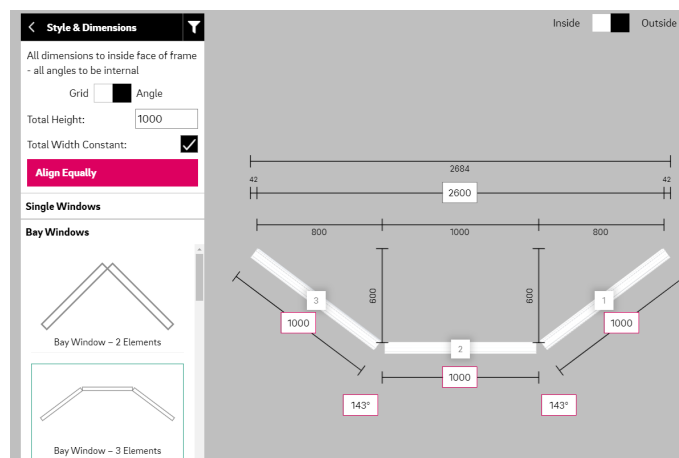

---

By selecting “Total Width Constant” the width won’t be affected by dimension changes.


---

**Step 4:**  
**Define the individual windows:**

Based on your selected pre-settings, styles and dimensions the individual windows are created.

You can define each window separately.

The number in the brackets displays the location of the individual window in the overview.

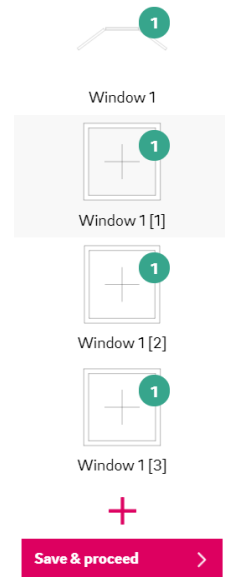

---

**Features & Benefits**



**Work on the go**



**Save time**



**Manage projects**



**Increase conversions**



**Avoid delays**



**Quick connection**

We wish you every success with your business.